



Quick Start Guide

 
SPR-180P

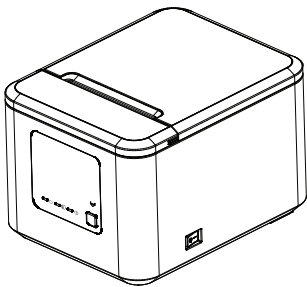

Packing List

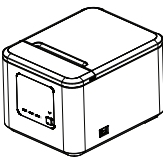

Printer




Power Cord



Quick Start Guide



 USB Cable



Power Adapter



Roll Paper



CD




Notes:

The items in the package are dependent on the actual order.


Appearance and Components

■ Front & Side View

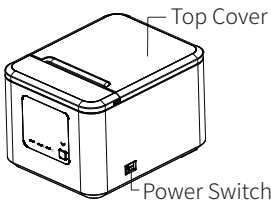

Top Cover

Power Switch

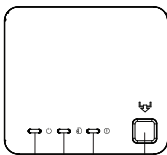


Feed Button

Error LED

Paper LED

Power LED

■ Back View

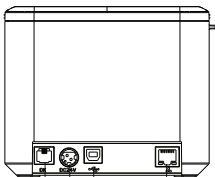


Ethernet Interface

USB Interface

Power Supply Interface


Cash Drawer Interface

Cover Opening Button

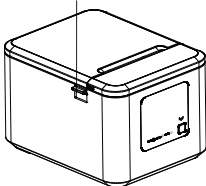


Paper Loading

1. Press the cover opening button to open the top cover.
2. Load the roll paper in the correct direction.

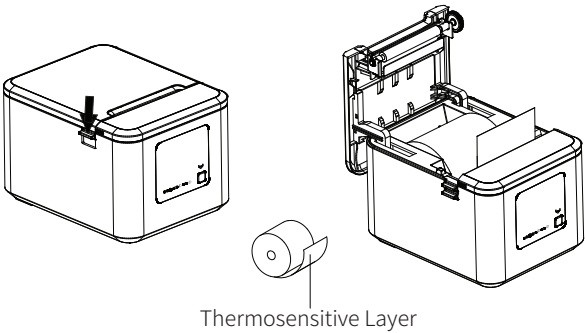


3. Pull out some paper, and close the printer cover.
4. Tear the extra paper.

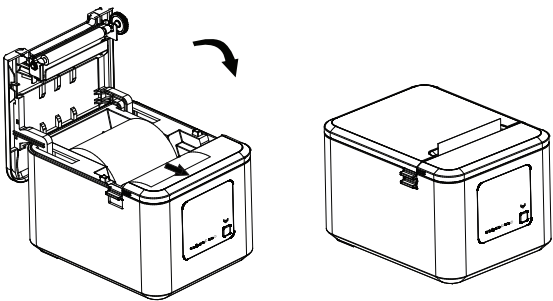

Power Supply

1. Make sure the printer is turned off.
2. Connect the power adapter to the printer.
3. Connect the power adapter to the power cord.
4. Plug the other side of the power cord into the socket outlet.

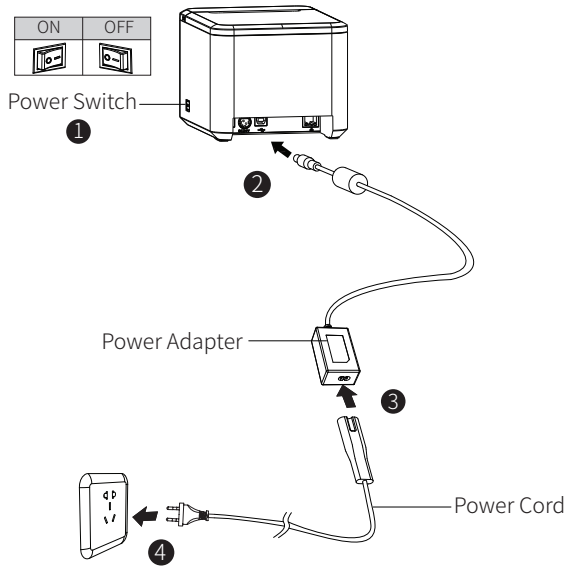

⚠ Notes:

- 1) The power adapter and power cord vary by country or region.
- 2) Please choose AC 100-240V 50/60Hz input voltage. If the input voltage is incorrect, the printer may be damaged.
- 3) Operating this device in a residential environment may cause radio interference.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Ethernet Setting

1. Connect the printer to router (or master device) through the network cable;
2. The default Ethernet mode is Static IP Mode with IP address "192.168.0.31";
3. Ethernet interface parameters can be set through POS utility or web (Master device and printer are under the same network segment, enter 192.168.0.31 in master device browser);
4. Please refer to User Manual for details.