


Quick Start Guide

SPR-60M

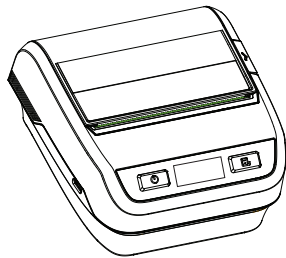

Importer: Setsis Bilisim teknolojileri

ADD: Kaptanpasa Mah. Halit Ziya Turkkan Sok. Famas Plaza C
Blok No: 19 Sisli Istanbul

Packing List



Printer



USB Cable



AC Adapter



Battery Pack




Quick Start Guide

⚠ Note: The items in the package are actually based on the order.


1

Appearance and Components


• Front View

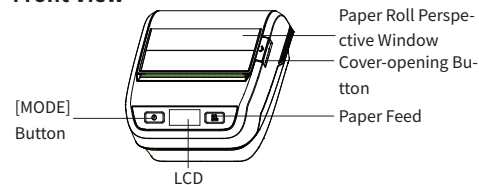

• Rear View

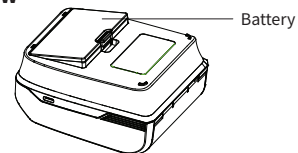


• Inside View

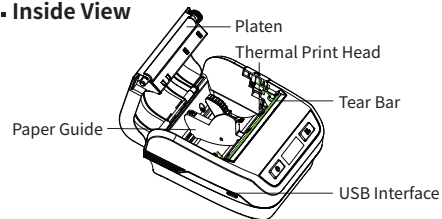


2

Loading Paper

1. Press the cover-opening button to open the paper cover.

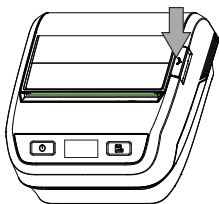


2. Unlock the paper guide as shown below.

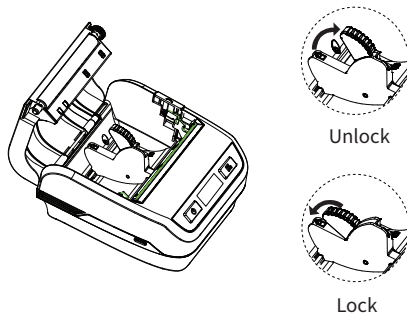

3


3. Load the paper in the orientation shown in the figure below.

Make sure that the thermosensitive layer is facing down. Adjust the paper guide per the paper width. After adjusting, lock the paper guide.

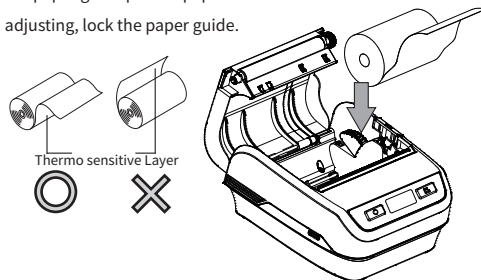


4. Pull some extra paper and close the cover.

Make sure that it is closed on both sides.

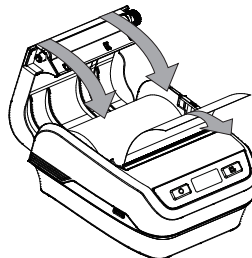

4


5. Use the tear bar to tear the extra paper.

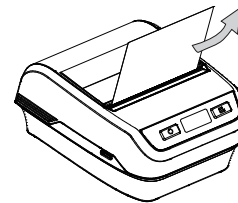


5

Battery Pack Installation

1. Make sure that the printer has been turned off before you insert or remove the battery pack.
2. Insert the battery pack into the back of the printer as in the figure shown below, following the direction of the arrow. Press down on the battery pack until the hook click into place.

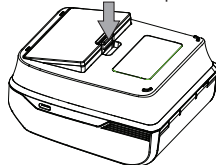

3. To remove the battery back, pull back the hook, and use the opposite procedure from the one you used to insert the battery pack.

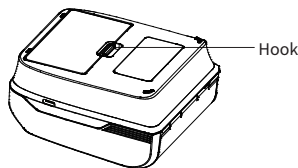

6

3. Press [MODE] button to change the option.
4. Press [FEED] button to change the category of suboption; press and hold [FEED] button to confirm the current setting.


- Note:**
- ◆Before changing the menu setting, make sure that the communication with a host device is disconnected.
 - ◆When the printer is under the Bluetooth communication with a host device, it cannot enter the Menu Settings mode.

9

Battery Charging

Please charge the printer with the supplied USB cable.

When battery pack runs out of power, the battery icon on the LCD will flash. It powers off automatically when continues printing. If you want to go on, please charge it.

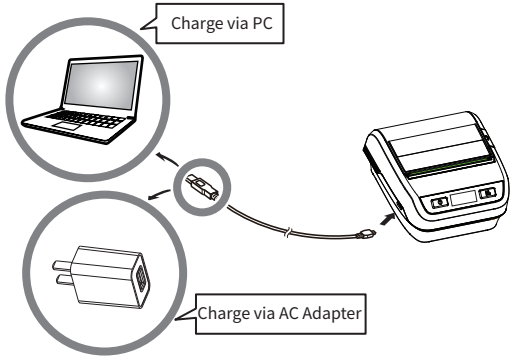


- Note:**
1. If the user replaces the wrong type of battery by himself, there will be explosion danger. Please be sure to send it back to the maintenance site according to the instructions to dispose of the used battery.
 2. This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.

7

Menu Settings

1. Press and hold the [MODE] button for approx. 2 seconds, and printer is turned on.

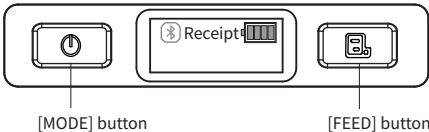

2. Press and hold both [MODE] button and [FEED] button, the main menu is displayed on the screen, followed by:
Density: dark/ light/ medium
Paper: label/receipt/Front black mark 2 inches/
Front black mark 3 inches/Rear black mark 3 inches
Cover closing and paper feeding: off/on
Express: standard and so on
Standby time
Shutdown time
Rotate
Self-test page printing
Label positioning
Exit menu

8