


Quick Start Guide

 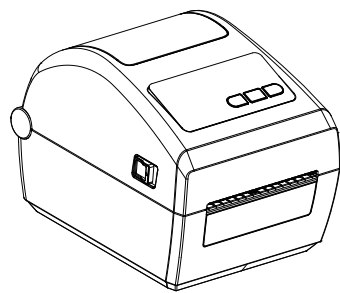


SPR-211D


Packing List



Printer



Power Adapter

 

Power Cord



USB Cable






Quick Start Guide



CD

Note: The packing items are based on the order.

Appearance and Components

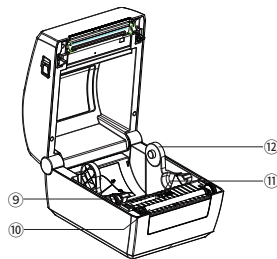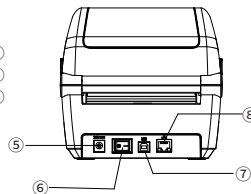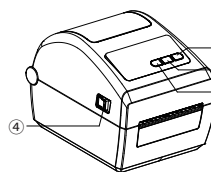

- ① Pause Button
- ② Feed Button
- ③ Cancel Button
- ④ Cover Opening Button
- ⑤ Power Receptacle
- ⑥ Power Switch
- ⑦ USB Interface
- ⑧ Ethernet Interface
- ⑨ Locking Tab
- ⑩ Platen
- ⑪ Movable Sensor
- ⑫ Movable Roll Holders

Note: The interface shown in the figure above is for reference only.

FCC WARNING:


Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Power Supply



1. Make sure the printer is turned off.
2. Connect the power adapter to the printer.
3. Connect the power adapter to the power cord.
4. Plug the other side of the power cord into the socket outlet.

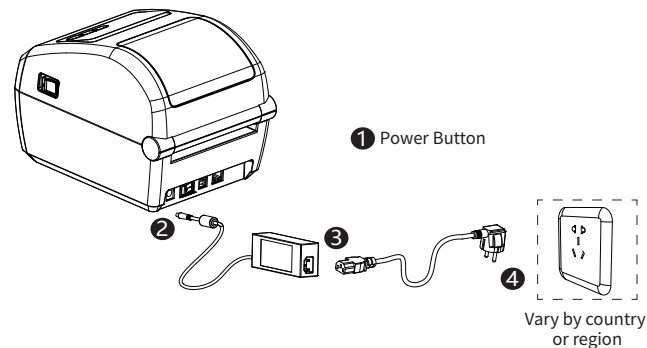



Warning:
Operation of this equipment in a residential environment
could cause radio interference.

Paper Loading

1. Press the cover opening button and lift the cover.
2. Pull the roll holders open and place the roll between them.

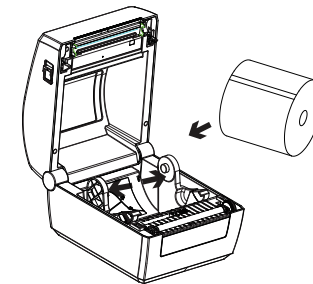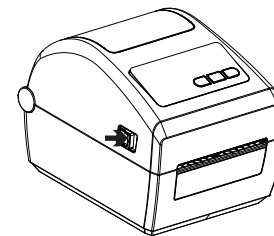

3. Confirm that the paper roll is tightly attached to the roll holders, and press down the locking tab.
4. Press down the cover until it snaps closed.

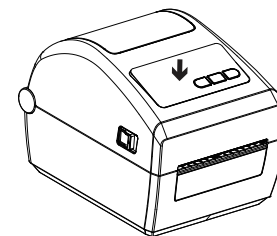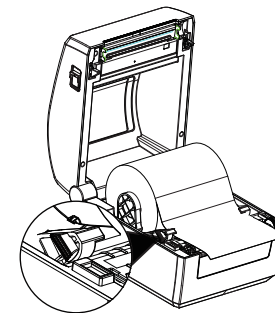

Note: Please refer to windows driver installation in the user manual.